


SUNRICHER

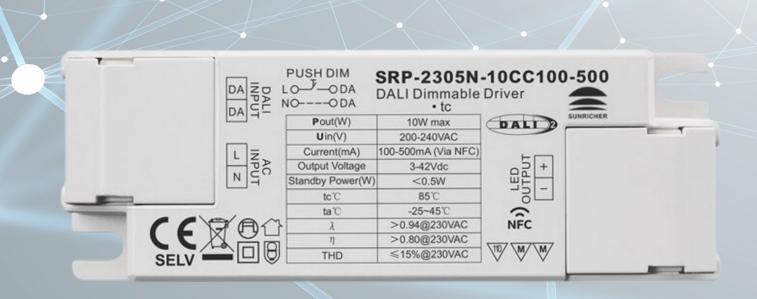

Compact Constant Current LED Driver with DALI-2 NFC 5 YEAR WARRANTY

Features of the:

SRP-2305N-10CC100-500









Low level dimming with 0.1 Dimming



NFC Compatible




Class II Power Supply


C€⊕ 🗷 🗪 IP20 SELV

Specification

| | | SRP-2305N-10CC100-500 | | | | | |
|--------------|---|--|--|--|--|--|--|
| Output | DC Voltage Range | 3~42V | | | | | |
| | Rated current | 100-500mA via NFC setting; Min.current gear lower to 0.1mA | | | | | |
| | Current Accuracy | ±3%(±1%@Certain full load) @ full load | | | | | |
| | Rated power | 10W | | | | | |
| | Voltage Range | 220-240VAC | | | | | |
| | Frequency range | 50/60Hz | | | | | |
| | Power Factor (Typ.) | > 0.94@230VAC Full load | | | | | |
| | Total Harmonic Distortion | THD ≤ 15% (@ full load / 230VAC) | | | | | |
| Input | Efficiency (Typ.) | 80% @ 230VAC full load | | | | | |
| P. C. C. | AC Current (Max) | 0.1A @ 230VAC | | | | | |
| | Inrush Current (Typ.) | Max. 4.32A at 230VAC; 80µs duration | | | | | |
| | Leakage current | < 5mA/230VAC | | | | | |
| | Standby Power Consumption | <0.5W | | | | | |
| | Anti Surge | L-N: 2KV | | | | | |
| Control | Dimming Interface | DALI Device Type 6 (DALI consumption < 2mA)/ AC Push | | | | | |
| | Dimming Range | 0.01%-100% @Max current | | | | | |
| | Dimming Method | Amplitude/CCR dimming | | | | | |
| | Dimming Curve | Linear/ Logarithmic optional | | | | | |
| | Short Circuit | Yes, recovers automatically after fault condition is removed | | | | | |
| Protection | Over Current | Yes, recovers automatically after fault condition is removed | | | | | |
| | Over Temperature | Yes, recovers automatically after temperature drop | | | | | |
| | Working TEMP. | -25°C ~ +45°C | | | | | |
| Environment | Max. Case Temp | TC=85°C (Ta="45°C") | | | | | |
| | Working humidity | 10%-95% RH (non-condensing) | | | | | |
| | Storage TEMP humidity | 40°C ~ +80°C, 10% ~ 95% RH | | | | | |
| Safety & EMC | Safety standards | EN61347-1, EN61347-2-13 | | | | | |
| | Withstand voltage | I/P-O/P: 3.75KVAC | | | | | |
| | Isolation resistance | I/P-O/P: 100MΩ/500VDC/25°C/70% RH | | | | | |
| | EMC emissions | EN55015, EN61000-3-2, EN61000-3-3 | | | | | |
| | EMC Immunity | EN61547, EN61000-4-2,3,4,5,6,8,11 | | | | | |
| Others | Size | 101*36*25 mm (L*W*H) | | | | | |
| | Weight | 0.15kgs | | | | | |
| | Warranty | 5 Years | | | | | |
| Notes | 1. DO NOT install with power applied to the device. | | | | | | |
| | 2. DO NOT expose the device to mois | ture. | | | | | |
| | | | | | | | |


Mechanical Specification

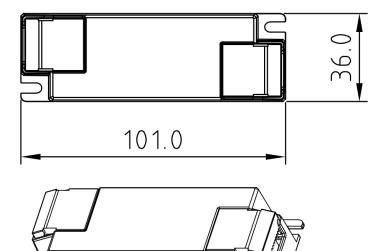

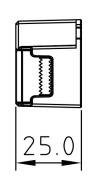


- Input Voltage Terminal: 2 pole terminal (same as the diagram)
- DALI or PUSH Dim Terminals: 2 pole terminals
- Output LED's: 2 pole terminal block: Positive (+), Negative (-)

DALI

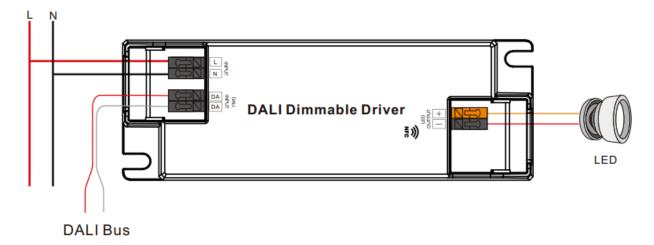

Push Dimming

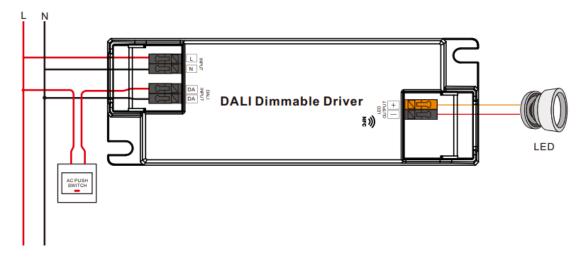

Operation

With DALI Master:


- 1. DALI Address
- 1 DALI address for 1 channel output are assigned by DALI Master controller automatically, please refer to user manuals of compatible DALI Masters for specific operations

With NFC Programming Devices:

- 1. Do wiring according to the wiring diagram and power on the DALI system
- 2. Recommend setting parameters without power-on the DALI devices
- 3. Please make sure your mobile phone has NFC function and enable it


Wiring Diagrams & Dimming

Operating Window

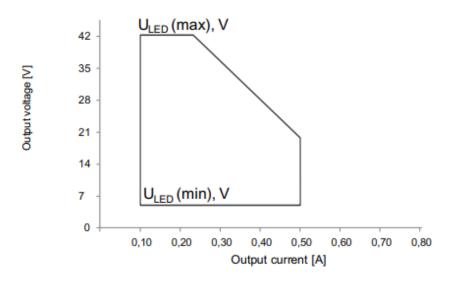

MCB Load Quality


| Module Number | lpeak | Twidth | Max.quantity of LED Driver per MCB | | | | | | | | | | | | | | |
|------------------------|-------|--------|------------------------------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| | | | B10 | B13 | B16 | B20 | B25 | C10 | C13 | C16 | C20 | C25 | D10 | D13 | D16 | D20 | D25 |
| SRP-2305N-10CC100-500 | 4.32A | 80µs | 34 | 45 | 55 | 69 | 86 | 57 | 75 | 920 | 115 | 144 | 80 | 104 | 128 | 160 | 200 |
| SRP-2309N-10CCT100-500 | 4.32A | 80µs | 34 | 45 | 55 | 69 | 86 | 57 | 75 | 92 | 115 | 144 | 80 | 104 | 128 | 160 | 200 |

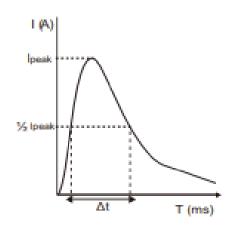

- 1. Those MCB parameters are based on ABB S200 series circuit breakers.
- 2. For different brands and models of miniature circuit breakers, the quantity of drivers will have difference.
- 3. Please do not exceed the above-mentioned quantity during on-site installation, and the specific load quantity shall be subject to on-site installation.
- 4. When the installation environment temperature of MCBs exceeds 30°C or when multiple MCBs are installed side by side, the number of mounted drives will be reduced, which requires recalculation.
- 5.Type C MCB's are strongly recommended to use with LED lighting

Operation - Working with 'SR NFC Tool' App

Step 1: Download the APP (searching "SR NFC Tool" from App Store and Google Play). Open APP.

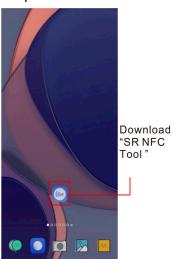






Note:

- Please make sure that you have enabled NFC function with your mobile phone/ tablet.
- Please make sure that the "NFC position" is matched.
- Please do not power on the device before setting.
- Please If you can't download "SR NFC Tool". Please contact with us
 - Please refer to QR code below

Step 2: Add device, and name it as you wish.

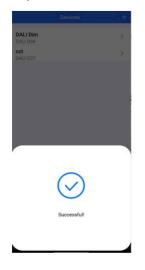








Apple QR Code:



Step 3: Unlock device, enter parameters configuring page.

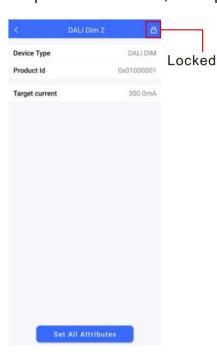

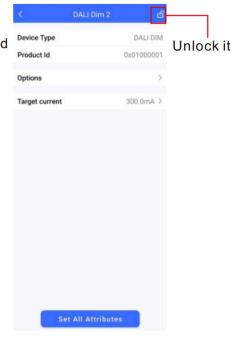

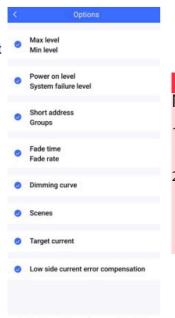


Notes:


- You have to unlock the device then do some settings
- Only when the corresponding function is selected, the function interface will be displayed.

Operation


Step 4: Few parameter interface, you can choose the setting based on your requirements.

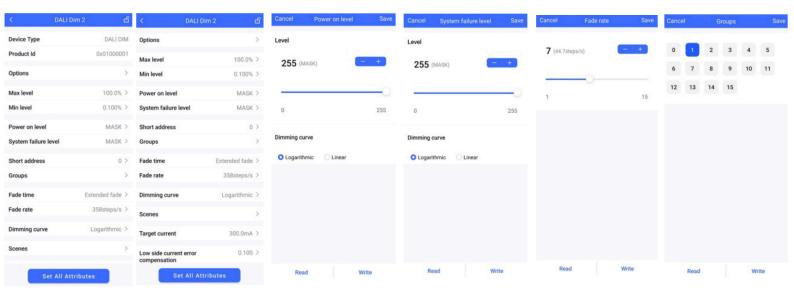

Step 5: After setting, please save the selected configuration via NFC and power on the device

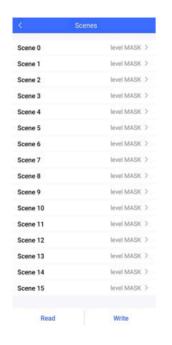



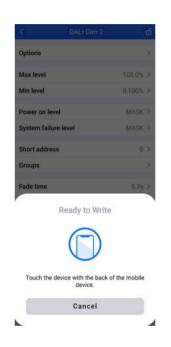




Notes:

- 1. NFC function doesn't require any power driver
- 2. Many functions can be configured by NFC. Kindly check your desired functions.
- 3. All of our DALI drivers are in the best performance within our DALI master/gateway

CLO and Corridor DIM(CD) Function Instruction

Step 1: Open APP, and Find the CLO/CD functions

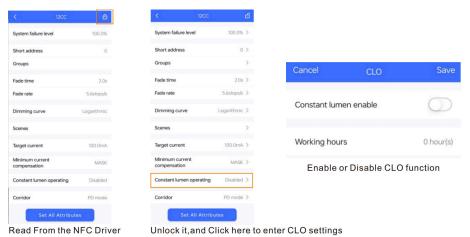

Step 2: Enter CLO Setting homepage







Note:

 Working hours: Ability to calculate the working hours of a single driver

Enable CLO function


Click "1", and set its time and level

Set your desired time and levels.
Graphic display

Step 3: Corridor dim(CD) function





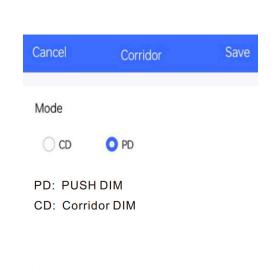


Read From the NFC Driver

Unlock it, and Click here to enter Corridor mode

Operation

Step 4: Enter CD Setting homepage



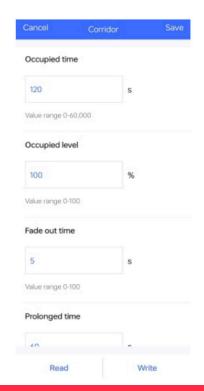



Notes:

- You should select either CD mode or PD mode, but not both.
- Under CD mode, you can realize it with normal (3rd party) AC sensor.

Additional Information



- 1. Please make sure your APP version is 1.0.10 or higher.
- 2. Please make sure NFC driver's firmware is available with CLO / CD functions